


CA TEC GAS CYLINDER STORAGE CABINET

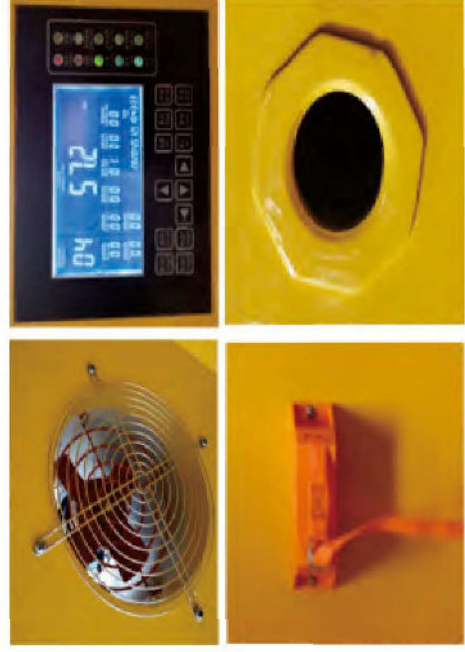

Features:

1. Welded 1.2mm thickness steel, designed to meet international standards of OSHA and NFPA (CODE 30). Double-walled steel structure for fire proof.
2. Explosion-proof cabinet with double explosion-proof glass and all the other accessories are explosion-proof.
3. Industrial special locking system for security.
4. There is a vent hole on the side of the cabinet to ensure the gas flow in the cabinet.
5. Quality fixed belts to keep the gas cylinder stand.
6. Special options:
 - Combustible gas detection alarm: when the gas alarm detects that the gas concentration reaches the critical point of the lower or upper explosion limit, it will send out an alarm signal.
 - Special gas detection alarm: select special gas detection alarm device according to the storage condition of gas cylinder, with high sensitivity and accuracy, more safe and reliable.
 - Automatic exhaust system: When the sensor in the cabinet detects the gas leakage and gives an alarm, the top fan will automatically work to discharge the gas out of the room through the exhaust pipe.
 - alarming system for temperature or humidity limitations.
 - smoke alarm: alarm when the inside smoke concentration exceed the setting value
 - auto-closing door.
 - Adjustable fold down ramp, for easy loading or unloading the gas cylinder bottle.

Technical details

Spec	Outer Size (W*D*H/mm)	Weight (kg)	Gas Cylinder	Door Type	Options
CFS-GC101	600*450*1900mm	63	single	single	alarm, fan
CFS-GC102	900*450*1900mm	90	double	double	